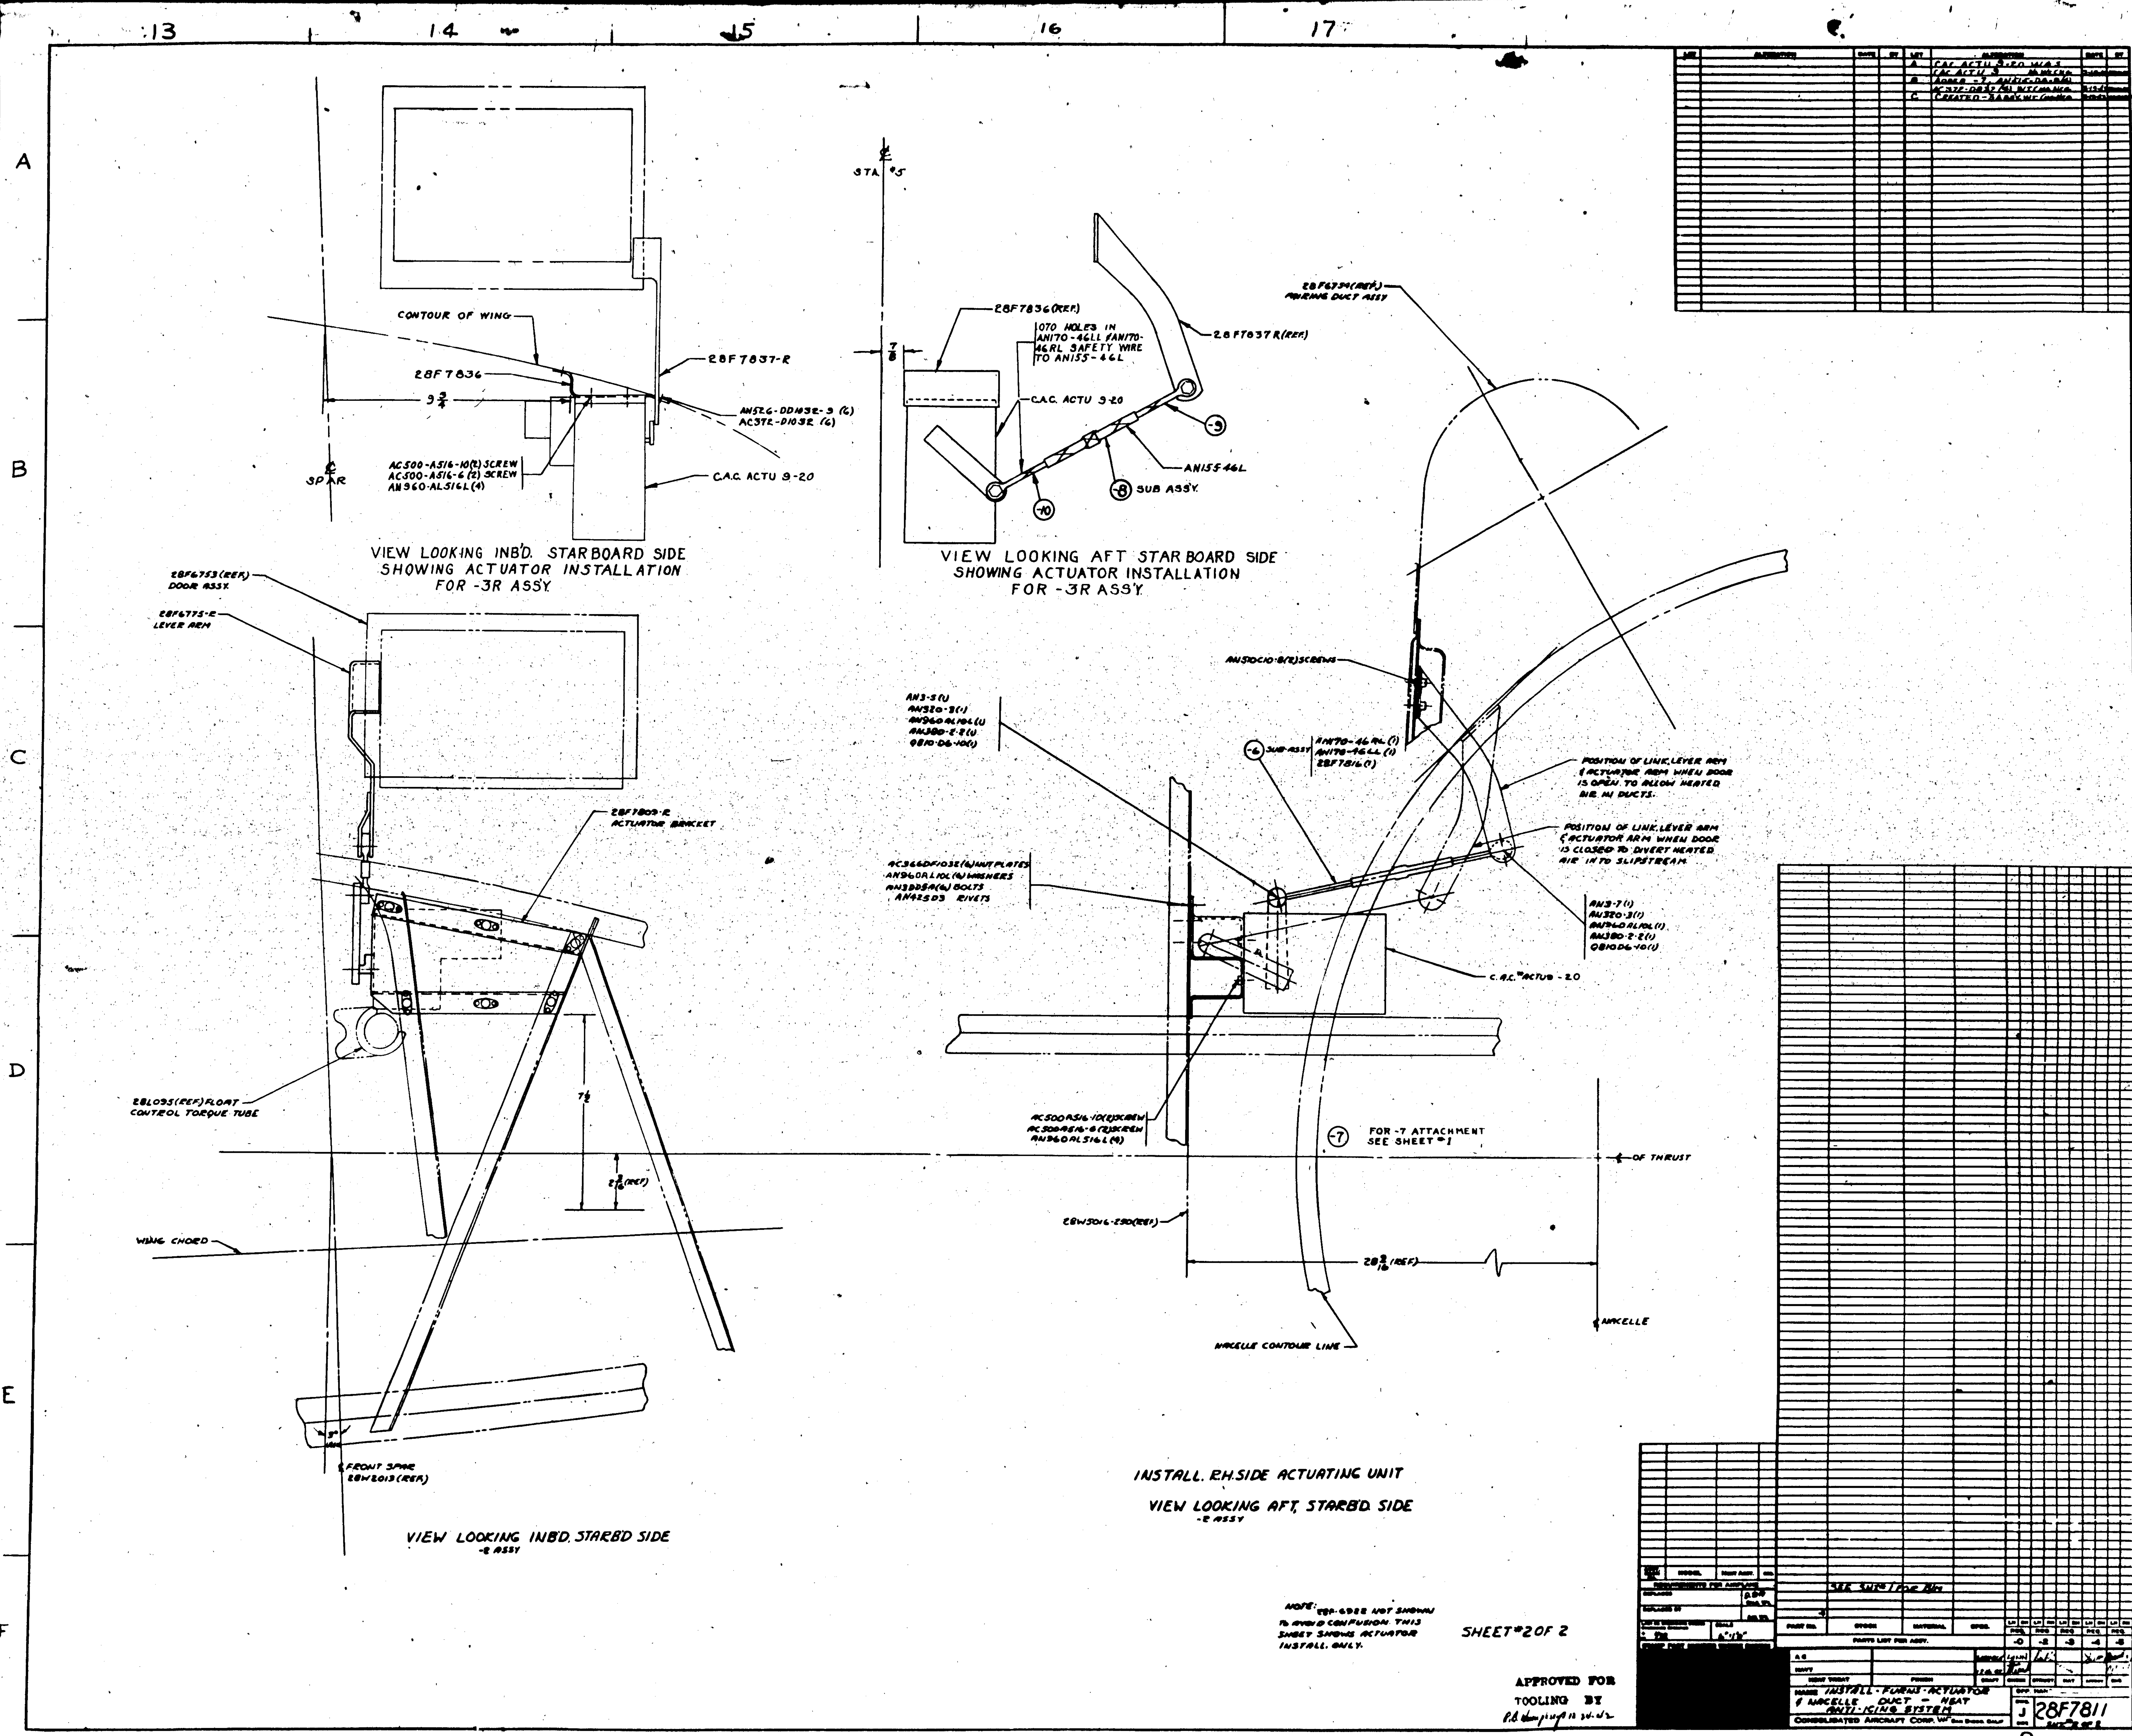


13
14
15
16
17
A
B
C
D
E
F
CONTOUR OF WING
28F7836
28F7837-R
AC500-A516-10(2) SCREW
AC500-A516-6(2) SCREW
AN960-AL516L(4)
C.A.C. ACTU 9-20
VIEW LOOKING INB'D. STARBOARD SIDE
SHOWING ACTUATOR INSTALLATION
FOR -3R ASSY.
28F7836(REF.)
.070 HOLES IN
AN170-46LL & AN170-46RL SAFETY WIRE
TO AN155-46L
C.A.C. ACTU 9-20
28F7837R(REF.)
AN155-46L
-8 SUB ASSY.
-9
-10
VIEW LOOKING AFT STARBOARD SIDE
SHOWING ACTUATOR INSTALLATION
FOR -3R ASSY.
28F6753(REF.)
DOOR ASSY.
28F6775-E
LEVER ARM
28F7809-R
ACTUATOR BRACKET
28L095(REF.) FLOAT
CONTROL TORQUE TUBE
WING CHORD
FRONT SPAR
28W2013(REF.)
VIEW LOOKING INBD. STARBD SIDE
-2 ASSY
AN3-5(1)
AN320-3(1)
AN960AL10L(1)
AN380-2-2(1)
08100-06-10(1)
AN510C10-8(2)SCREWS
-6 SUB-ASSY
AN170-46RL (1)
AN170-46LL (1)
28F7816(1)
POSITION OF LINK, LEVER ARM & ACTUATOR ARM WHEN DOOR IS OPEN TO ALLOW HEATED AIR IN DUCTS.
POSITION OF LINK, LEVER ARM & ACTUATOR ARM WHEN DOOR IS CLOSED TO DIVERT HEATED AIR INTO SLIPSTREAM.
AN3-7(1)
AN320-3(1)
AN960AL10L(1)
AN380-2-2(1)
08100-06-10(1)
C.A.C. ACTU -20
28F6754(REF.)
FAIRING DUCT ASSY
-7 FOR -7 ATTACHMENT SEE SHEET #1
OF THRUST
28W5016-250(REF.)
NACELLE
NACELLE CONTOUR LINE
INSTALL. R.H. SIDE ACTUATING UNIT
VIEW LOOKING AFT, STARBD SIDE
-2 ASSY
NOTE: 28F-6922 NOT SHOWN TO AVOID CONFUSION THIS SHEET SHOWS ACTUATOR INSTALL. ONLY.
SHEET #2 OF 2
APPROVED FOR TOOLING BY
SEE SHT #1 FOR P/L
PART NO.
STOCK
MATERIAL
SPEC.
PARTS LIST PER ASSY.
REQ.
-0
-2
-3
-4
-5
NAME INSTALL - FURNS - ACTUATOR & NACELLE DUCT - HEAT ANTI-ICING SYSTEM
CONSOLIDATED AIRCRAFT CORP.
J
28F7811
R

H 434